



FMA[®]

SPECIALIST TACTICAL HELMET INSTRUCTIONS

SPECIALIST战术头盔说明书

www.fma.hk

外部环绕附件

Exterior loop accessory attachment

如何将魔术贴毛面张贴到头盔外部，并将设备固定再头外侧的魔术贴上,请如图张贴。

How to attach the Velcro surface to the outside of the helmet and fix the device to the Velcro on the outside of the head. Please attach it as shown in the picture.



左面
Left

环绕附件侧面视图
Side view of wrap-around attachment



右面
Right



环绕附件后部视图
Surround Accessory Rear View




环绕附件顶部视图
Wrap-around attachment top view

1 请小心粘贴魔术贴

Please be careful when attaching the Velcro

温馨提示： 魔术贴粘贴后粘性较强，若强行撕下可能导致残胶残留在头盔上，为确保使用效果，请在首次粘贴时仔细对准位置，避免后续调整。


Warm reminder: The Velcro has strong stickiness after being pasted. If it is forcibly torn off, residual glue may remain on the helmet. To ensure the use effect, please carefully align the position when pasting for the first time to avoid subsequent adjustments.

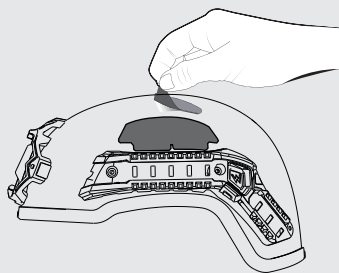

2 清洁头盔外部 Clean the outside of the helmet

为了去除旧的魔术贴上的多余胶水，并确保新的魔术贴能够最佳粘附，用一块干净的毛巾和低浓度洗洁精擦拭受胶水区域。不要使用刺激性化学物质。如果还有胶水残留，可以使用低浓度酒精去除顽固的残留物。在尝试将新的魔术贴铁在外壳之前，请让头盔晾干。

To remove excess glue from old Velcro and ensure optimal adhesion of new Velcro, wipe the glued area with a clean towel and low-concentration dish soap. Don't use harsh chemicals. If there is still glue left, you can use low-concentration alcohol to remove stubborn residue. Allow the helmet to dry before trying to attach the new Velcro to the shell


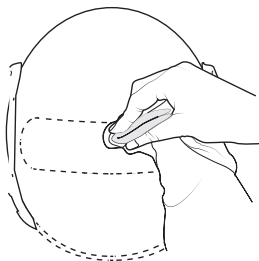


3 准备张贴 ready to post

请仔细阅读下一页的安装说明，仔细对齐魔术贴确保正确位置，在移除背部贴纸之前，检查适配所有的魔术贴片，魔术贴上的胶是强力胶，一旦粘贴上，就不容易撕下。

Please read the installation instructions on the next page carefully, carefully align the Velcro to ensure the correct position, and check that all Velcro pieces fit before removing the back sticker. The glue on the Velcro is strong glue, and once it is attached, it is not easy to tear off.



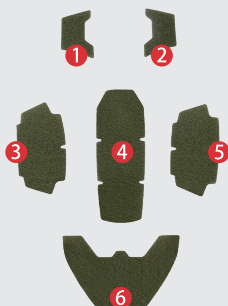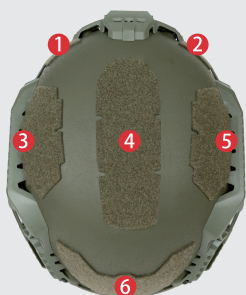


头盔魔术贴 安装位置

Helmet Velcro Installation
Location



头盔内衬 安装位置

Helmet liner mounting
location

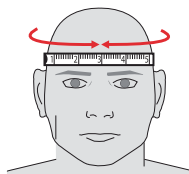

周长


circumference

使用卷尺测量周长:

Use a tape measure to
measure the perimeter:

眉毛和耳朵上方1/2英寸处。
使用尺子测量长度。

1/2 inch above the eyebrows
and ears.
Use a ruler to measure the
length.

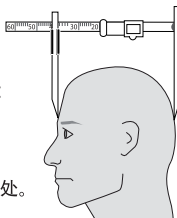

长度


length

使用卡尺测量长度和宽度:

Measure length and width with
calipers:

测量最大长度/宽度, 手指宽度
约为眉毛上方或耳朵上方的1/2
英寸

Measure the maximum length/width,
finger width is about 1/2 inch above
the eyebrows or above the ears

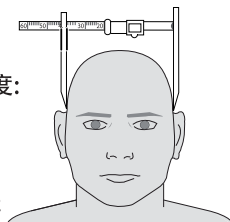

宽度

width